

Technical Data Sheet

Installing the Tribute DV Model 8050 Accessory Viewing Screen *Kit #90-69500*

Publish Date: 11/18/2005

MATERIALS REQUIRED:

Screen
#10-24 x 3/8" screws (4 ea)

TOOLS REQUIRED:

Cross-tip screwdriver

PROCEDURE:

1. Lift the front up enough to clear the top tabs, and pull out to remove it from the stove.



Photo 1
Front removed from stove.

2. We recommend laying the front facedown on carpeting (or something else soft & nonabrasive) to avoid scratching the finish. Position the screen on the reverse side of the front and install the four screws.

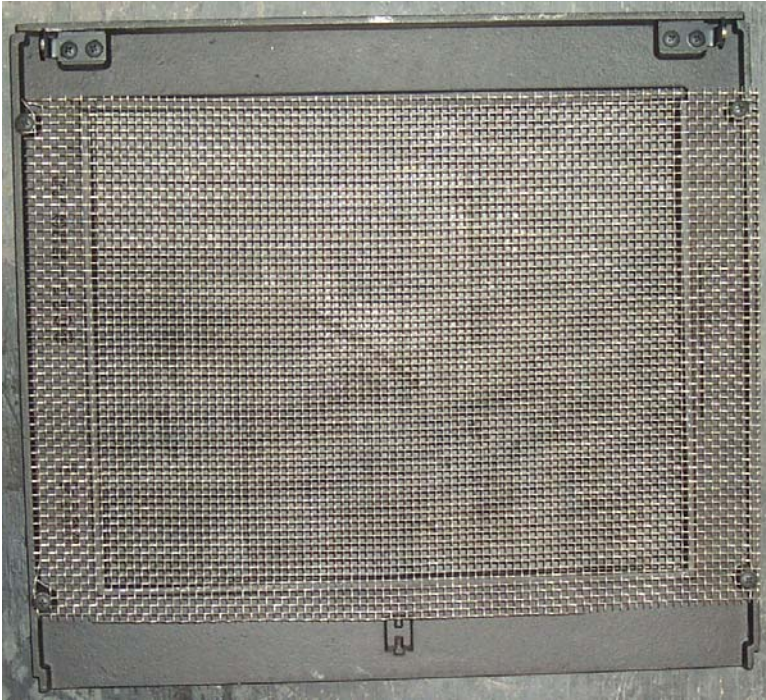


Photo 2
Front with Spark Screen

3. Place the front back onto the stove. Lift up so the tabs clear the firebox, then lower into place.



Photo 3
Screen and front installed
onto the stove.