

HearthStone[®] Stoves

P.O. BOX 1069, MORRISVILLE, VERMONT 05661 (802) 888-5232 FAX (802) 888-7249

INSTRUCTIONS TO INSTALL THE HEARTHSTONE I REAR HEAT SHIELD - NEW STYLE pt# 91-57105A

KIT COMPONENTS:

Rear Heat Shield (1)
Top Hanger Clips (2)
Bottom Hanger Clips (2)

TOOLS REQUIRED:

Slotted Screwdriver

BEFORE YOU BEGIN:

Identify the pieces. Use the drawing on the back of this page to determine which hangers are for the top and which are for the bottom.

PROCEDURE:


1. Insert the top hangers down into the top slots in the rear heat shield.

NOTE: It may be necessary to carefully pry the slots open with the slotted screwdriver to fit the hangers into the slots.

2. Insert the bottom hangers up into the bottom slots in the rear heat shield.
3. Install the shield on the stove. Rest the bottom hangers between the bottom castings and stone. Snap the top hangers up under the lip of the top casting.

MANUFACTURER OF FINE SOAPSTONE WOODSTOVES AND CAST IRON PRODUCTS




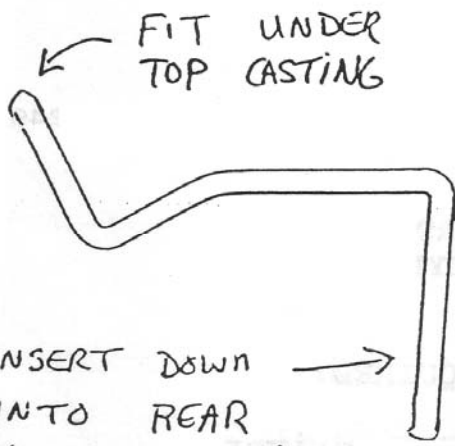

INSERT DOWN INTO REAR HEAT SHIELD - TOP SLOT.

DETAIL A


TOP HANGER
2 PLCS
SCALE: FULL

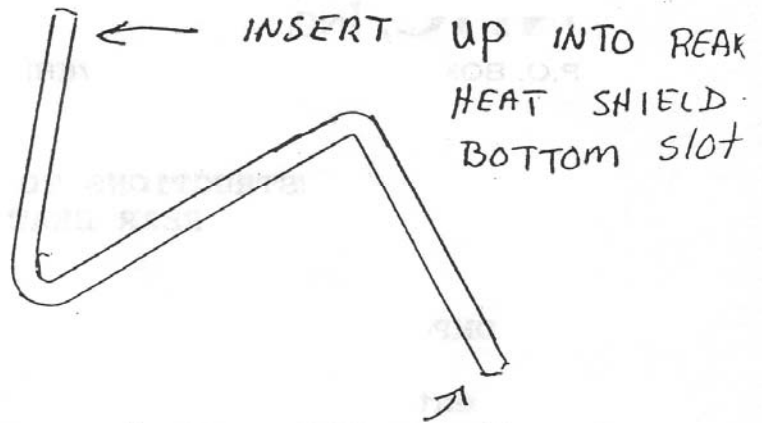

REST BETWEEN BOTTOM CASTING AND REAR STOVE

DETAIL B

BOTTOM HANGER
2 PLCS
SCALE: FULL

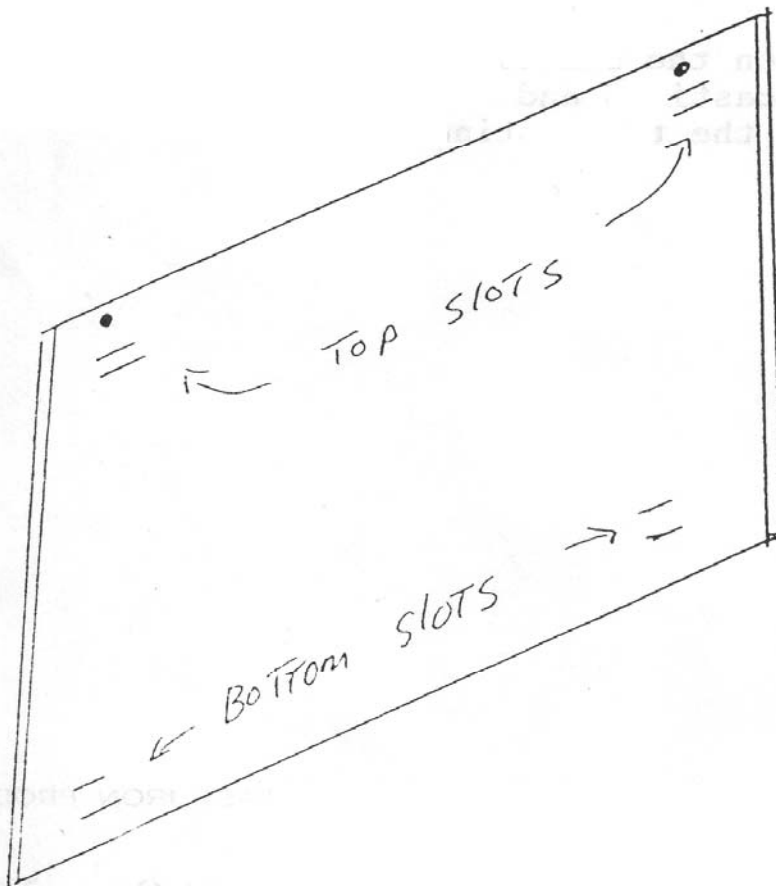

NOTE: SLOTS
FACE BACK
OF STOVE