



Technical Data Sheet

Installation of the Sterling Front Door Screen *Assembly 95-57200 Fits G Series Models 8521 & 8531*

Note: Installation of this screen eliminates the need for the floor protection otherwise required in front of the heater.

KIT CONTENTS:

1-Screen #5501-703
1-Label #3300-135
1-Screw #4500-2165 (10-24x1-3/8"pan black oxide)


TOOLS REQUIRED:

Phillips head screwdriver

BEFORE YOU BEGIN: Turn the valve control to the off position. Work only on a cold stove.

PROCEDURE:

- 1) Using a Phillips screwdriver, remove and discard the screw from stove door.
- 2) Lift the door straight up, and off the stove.
- 3) Remove and discard the washers that are on the hinges.
- 4) Place screen in front of the door and place the hinge pins through both.
- 5) Place the screen and door on the front door frame, allow the hinge pins to fall through the door, the screen, and into the frame.
- 6) Close door and replace the door screw with the one provided with the screen.
- 7) Attach the provided label as noted in illustration on the back of this page.

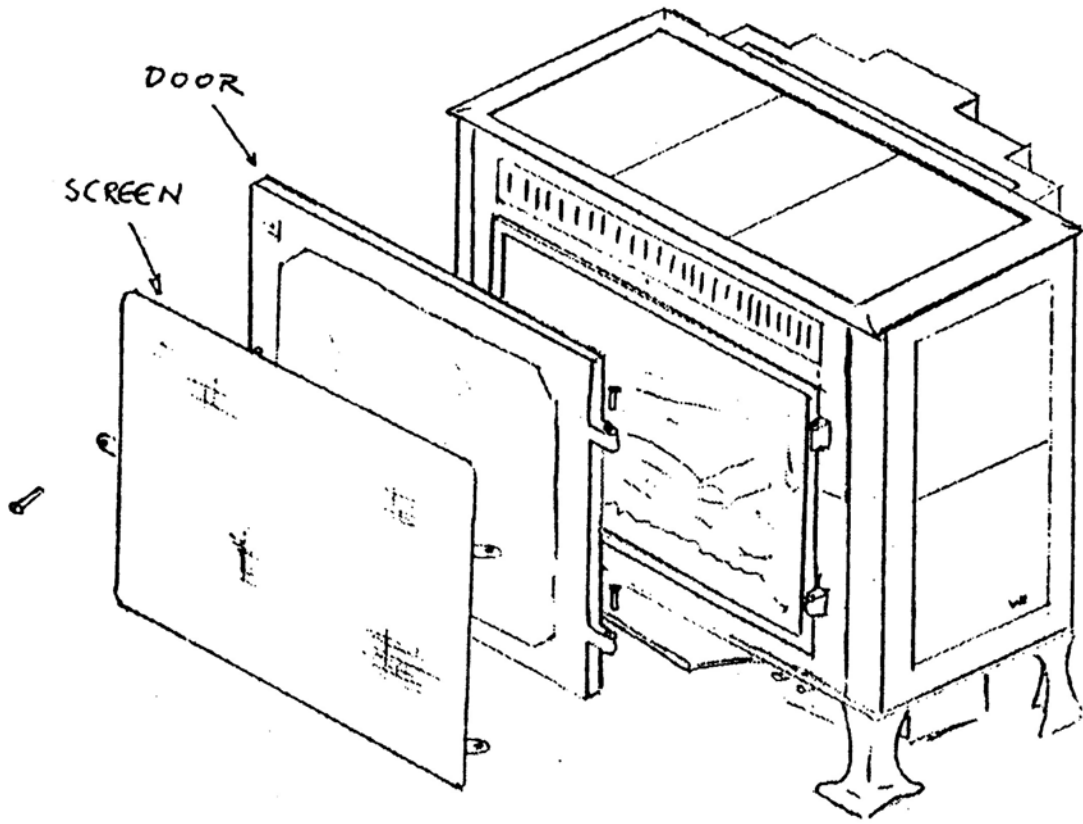

Install the screen label above the product information label on the back of the stove.

label

THIS STOVE HAS BEEN FITTED WITH A FRONT DOOR SCREEN (ITEM NO. 95-57200). IF THIS SCREEN IS REMOVED A HEARTH PAD MAY BE REQUIRED. SEE HEARTH REQUIREMENTS SECTION OF OWNERS MANUAL.
3300-135