

# Technical Data Sheet

## Bristol (8762) Front Glass Kit

*Kit 97-58620*

**Publish Date: January 27, 2012**

### **KIT COMPONENTS:**

3030-062	1 EA	GLASS:17"x 12",BRI
3160-060	4.7 FT	GASKET: TAPE,1/4BDx5/8FLX7/8OA TADPOLE
4400-0203	2 EA	RIVET: BLIND,1/8x1/8" GRIP,SS SEALED
5710-360	1 EA	FRAME: FRONT GLASS, BRI
5710-365	2 EA	CLIP: FRONT GLASS, BRI/DVI 38/DVI 44

### **TOOLS REQUIRED:**


None

 **IMPORTANT:** This kit and these instructions apply to the Bristol (8762) model only.

### **PROCEDURE:**

#### **Be sure the Insert is cool to touch before replacing the Glass Kit Assembly**

1. Remove the top castings from the unit by lifting and pulling it away from the stove.
2. Remove the front castings and screen from the stove by lifting and pulling them away from the unit.
3. **Remove the broken glass frame and assembly.** Locate the 2 front glass mounting clips on the stove just above the top of the glass, as shown in **Figure 1**. Unlatch the 2 glass clips from the glass frame.

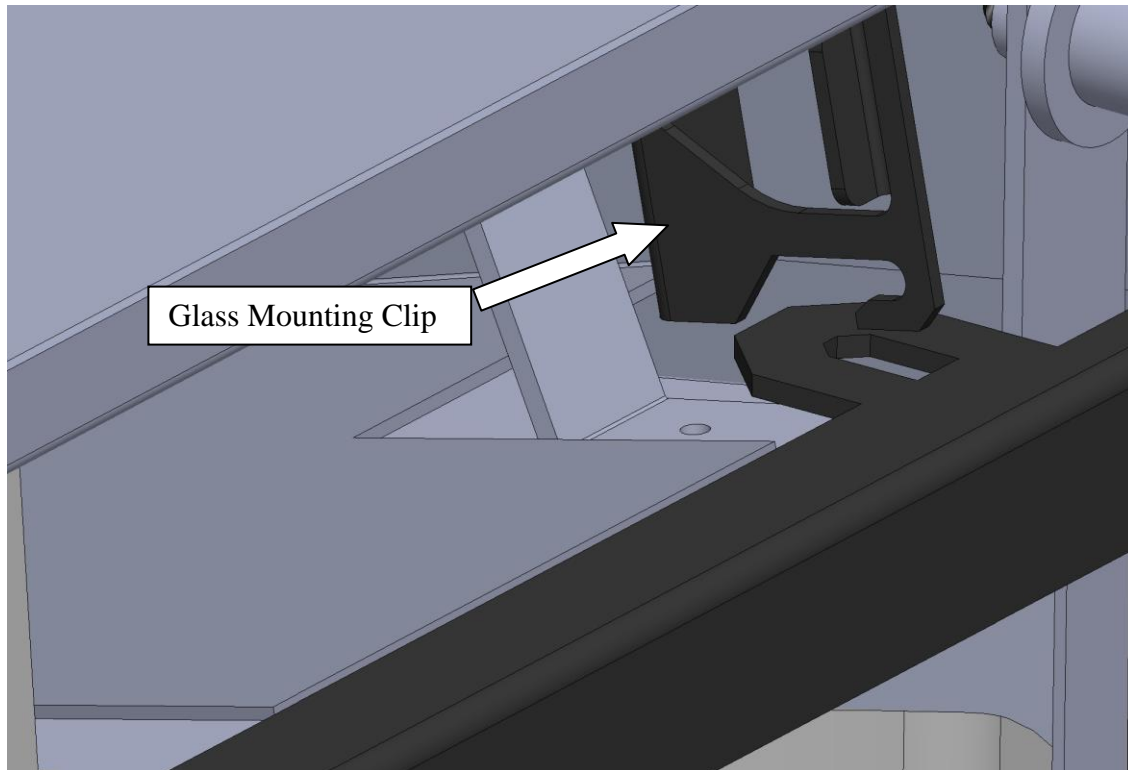

**Figure 1**

4. Carefully lift and pull the broken Glass Frame Assembly away from the stove.
5. Place the new Glass Frame Assembly in place on the stove. **Be sure the 2 lower slots slide down over the bushings on the bottom of the stove.**
6. Attach the 2 Glass Mounting Clips to the Glass frame.
7. Ensure the Glass Frame Assembly is seated against the firebox creating a sufficient seal.
8. Install the front screen and front castings
9. Place the top castings back on the stove.