


Technical Data Sheet

97-68110 Tucson II 8702 Fan Control Module Adapter (FCM) Kit Instructions

 This kit is only necessary for Tucson DX models that have FCM wire connectors that do not match the FCM female connection.

Publish Date: 8/25/2010

MATERIALS SHIPPED WITH KIT:

1- FCM wire adapter harness (7000-058)

TOOLS & MATERIALS REQUIRED:

Wire cutters/stripper

Small flat head screwdriver

PROCEDURE:

1. Use **Figure 1** for reference when making the following connections. Determine which connector is needed to complete the connection to the Fan Control Module (FCM).
2. Unscrew and remove the opposite connector from the adaptor screw terminal.
3. Cut off the FCM connector from the existing wire harness at a point above the black wrap leaving the three individual wires exposed.
4. Remove 1/8" of the wire insulation from each of the individual wires.
5. Insert the red wire into the adaptor screw terminal that is opposite the red wire already connected to the adapter. Tighten the screw to hold the wire in place. Repeat with the purple and gray wires.
6. Plug the appropriate FCM connector from wire adapter to the FCM.

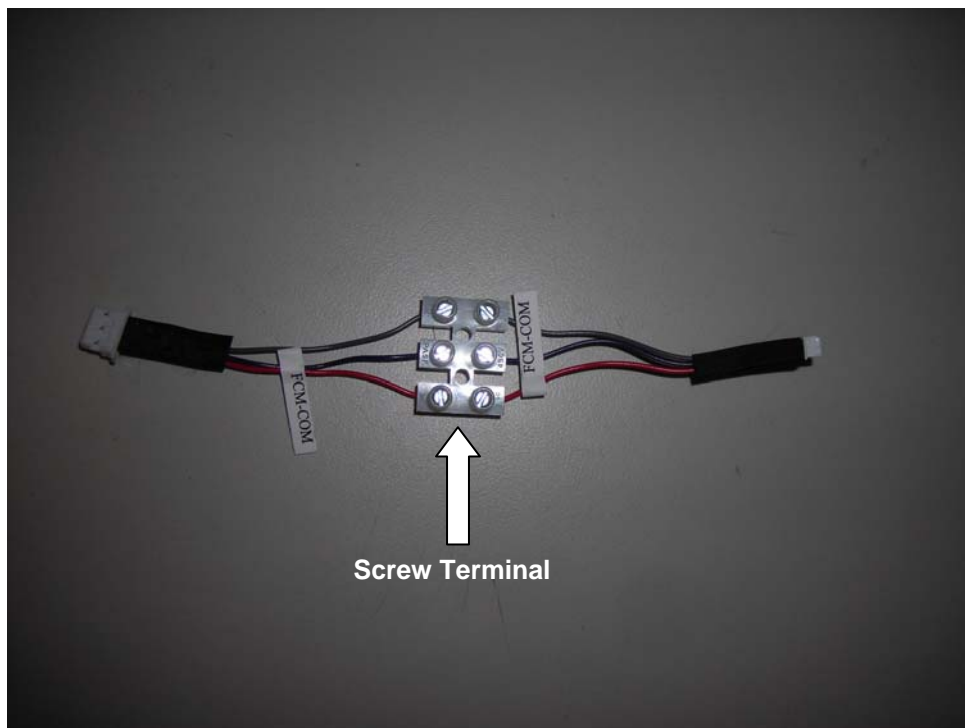


Figure 1