



Technical Data Sheet

DVI-38 Model 8850 Surround Installation Instructions

Kit #98-596000 Series Surrounds

Publish Date: 11/10/2011

INCLUDED IN KIT:

44"x32" Rectangular Surround Assembly
or
48"x34" Rectangular Surround Assembly

Part Numbers: 98-5961000, 98-5960017, 98-5961100, and 98-5961117.

TOOLS REQUIRED:

None

PROCEDURE:

1. If the facade is on the DVI-38, remove the façade and proceed.
2. Locate the 4 mounting tabs on the surround.
3. Lift the surround and place it on the firebox. Slide the mounting tabs down onto the receiving hooks on the firebox as shown in following figure. Ensure all 4 tabs engage the hooks.
4. Position the firebox so the back of the surround is flush against the wall/fireplace.
5. To remove the surround: simply lift straight up and pull away from the firebox.

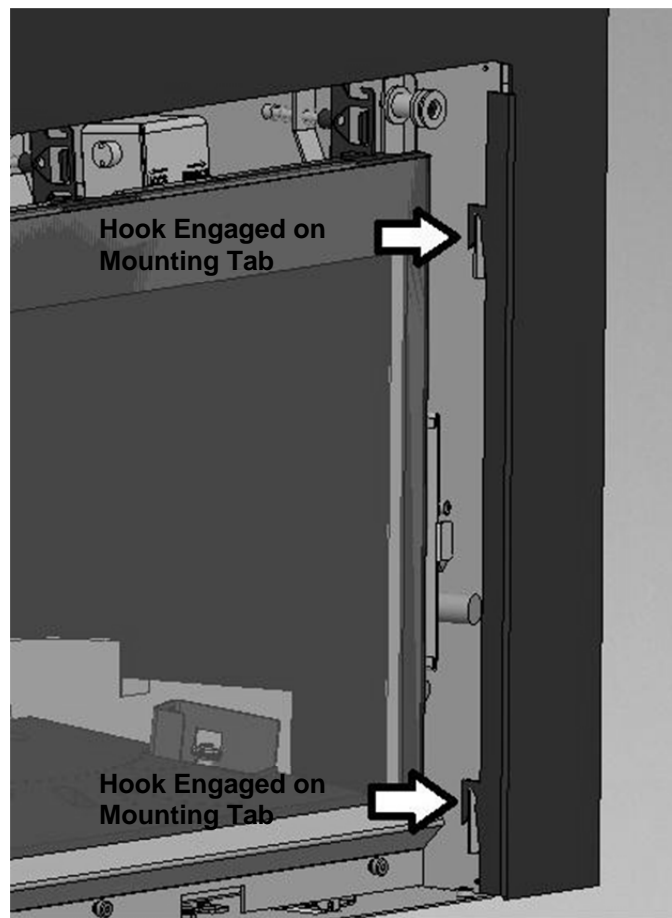


Figure 1 - Surround Mounting Tab Detail