



## Technical Data Sheet

### DVI-38 (8850) & DVI-44 (8860) Surround Installation Instructions

*Kit #98-5960000 Series Surrounds*

**Publish Date:** 11/10/2011

#### **INCLUDED IN KIT:**

40"x27-5/8" Surround Assembly or  
44"x32" Surround Assembly or  
48"x34" Surround Assembly

#### **TOOLS REQUIRED:**

None


These Instructions will apply to the following Surrounds:

**DVI 38:** 98-5961110, 98-5961217, 98-5961000, 98-5960017, 98-5961100, and 98-5961117.

**DVI 44:** 98-5960010, 98-5960117, 98-5961010, 98-5961017.

#### **PROCEDURE:**

1. If the facade is on the insert, remove the façade and proceed.
2. Locate the 4 mounting tabs on the surround.
3. Lift the surround and place it on the firebox. Slide the mounting tabs down onto the receiving hooks on the firebox as shown in following figure. Ensure all 4 tabs engage the hooks.
4. Position the firebox so the back of the surround is flush against the wall/fireplace.
5. To remove the surround: simply lift straight up and pull away from the firebox.

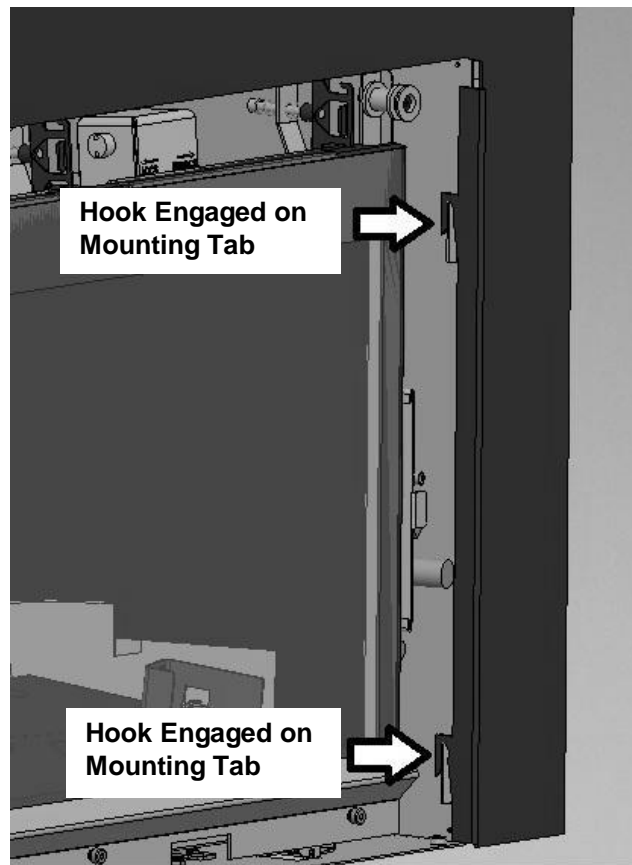

**Figure 1 - Surround Mounting Tab Detail**