



# Technical Data Sheet

## DVI-32 8870 & DVI-Ht 8890 Threshold Install

*Accessory Kit Number 98-8490010\**

**Publish Date:** 08/02/2005

**Tools Required:**

Cross-tip Screwdriver

Appliance Blanket, Tarp, or Similar Protective Surfacing

**Parts Included:**

ITEM	PART NUMBER	DESCRIPTION	QTY.
1	2810-970	CENTER THRESHOLD SECTION	1
2	2810-969	LEFT THRESHOLD SECTION	1
3	2810-971	RIGHT THRESHOLD SECTION	1
4	5890-200	THRESHOLD BRACKET	2
5	4500-3436	#10-24x3/8" SCREW	8


**Hardware Included:**

Qty	Description
8	#10-24 x 3/8" Black Oxide Screws

**Procedure:**

1. Protect a work area on the floor with an appliance blanket, tarp, or other protective material. This will prevent damage to the floor and protect enameled pieces from chipping and scratches.
2. Arrange the cast pieces (top down) on your work surface, as shown in the diagram.
3. Align the steel brackets with the holes and install the included #10-24x3/8" screws.
4. Install the Threshold Assembly by raising the firebox enough to slide it under the firebox.
5. Lower the firebox onto the threshold and align.

\*Part number for Matte Black Finish – assembly procedure is identical for all finishes.

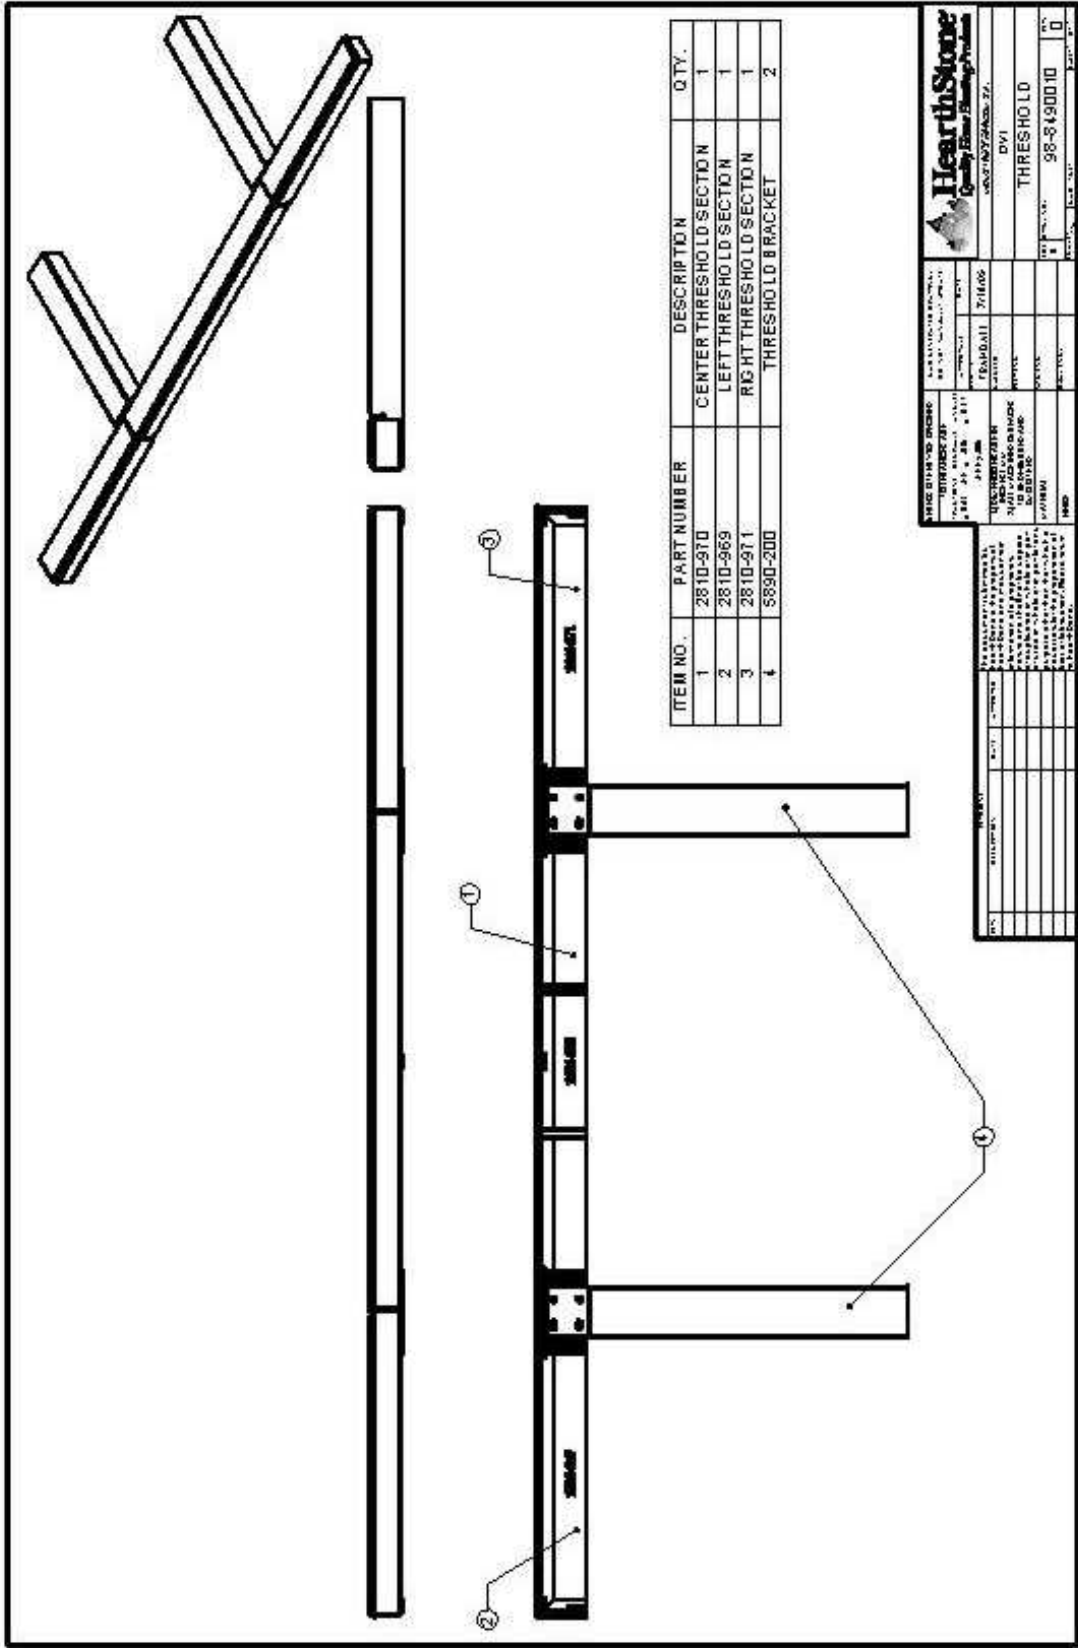

**HearthStone**  
Quality Stone Fireplace Products

PROJECT NO. 98-8190010

DATE 10/27/98

BY [Signature]

THRESHOLD