

## 26 Corner Install Kit

Series 90-99901

OEM Model# CK-26-1

For Use With AURORA Orion 8910-0000N and 8910-0000P Only  
OEM Model# SL-26N & P

### Owner's Manual Installation Instructions

Read This Manual in Its Entirety  
Install this kit according to this manual

When installing the AURORA ORION 26 using this Corner Install Kit, you will need to refer to both these instructions and the installation instructions supplied with the fireplace.

**NOTE:** A 45° Elbow and a 12" straight section of Direct Vent Pipe will be required to complete the corner installation.

**STEP 1:**

Having decided on a location for the corner installation, use the wall panel as a template and mark the location of the 7 mounting holes, then use the right wall panel to locate and mark the remaining 2 holes. Decide which wall the vent and gas inlet will penetrate and mark the locations of the Vent outlet hole and Gas inlet hole. Cut the vent outlet hole and gas inlet hole (refer to the Hearthstone ORION 26 Owner's Manual). Pre-drill the 9 lag bolt holes with a 5/32" diameter drill. Be sure that there is solid wood at each mounting location. If not, the wall should be reconstructed to provide the needed support.

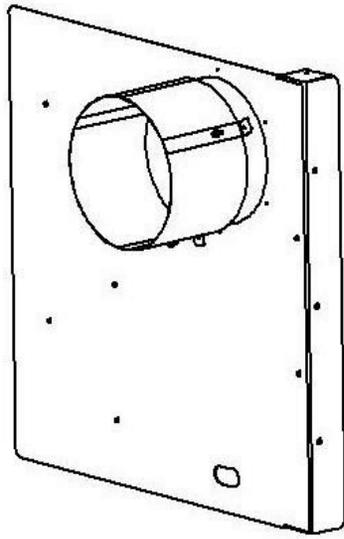


Fig. 1

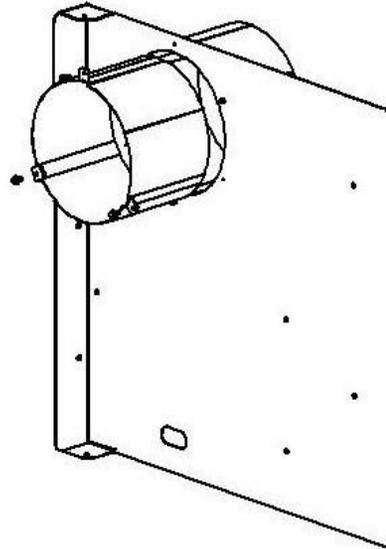


Fig. 2

**STEP 2:**

Attach the inner and outer telescoping vent pass through heat-shields to the wall plate as shown in Fig. 1 & 2. The vent pass through heat-shields are to be installed where the vent passes through the first adjacent wall to the left or right of the corner install kit.

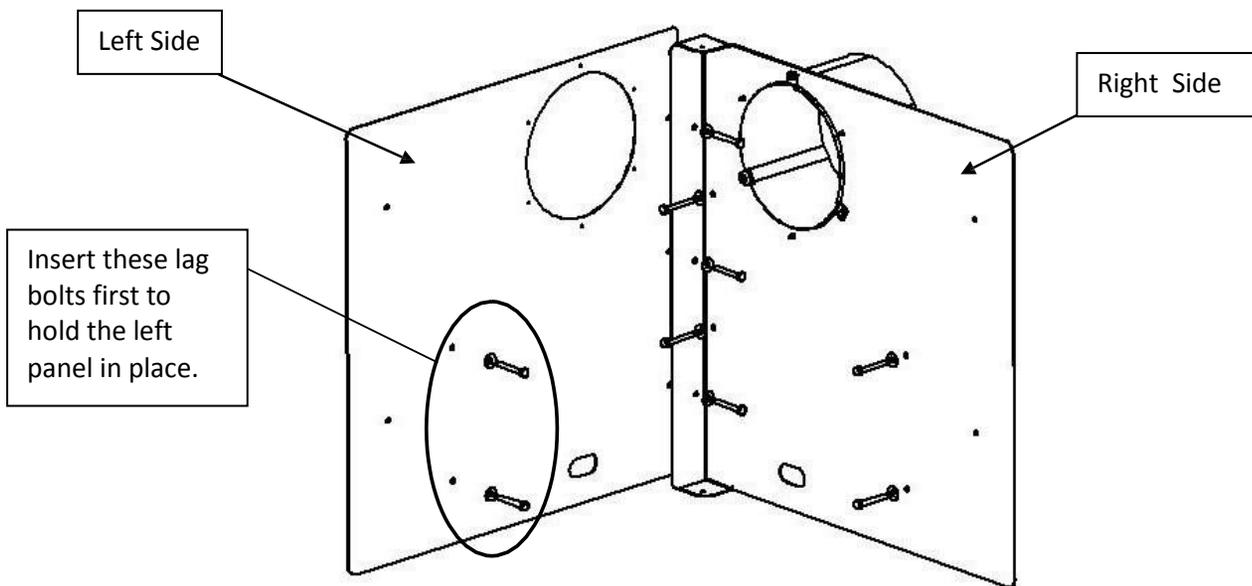


Fig. 3

**STEP 3:**

Attach the wall plate to the wall with the pass through heat-shields in place, and fasten to the wall using the 9 lag bolts provided. Mount the left side first with the 2 outer lag bolts, then mount the right side. See Fig. 3.

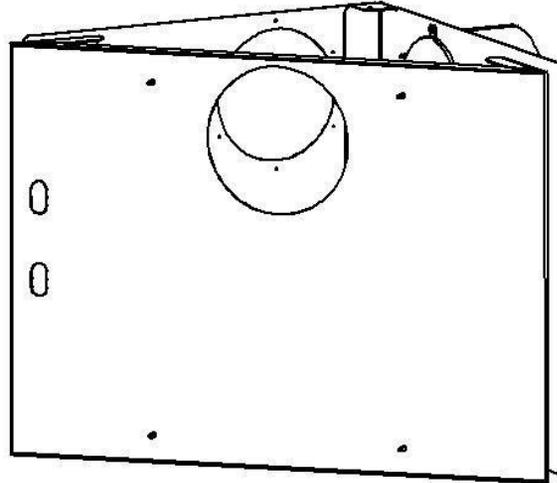


Fig. 4

**Step 4:**

Having secured the wall plate to the wall fit the diagonal mounting plate as shown in Fig. 4. Please ensure that all four mounting pins are fully engaged in the 4 keyway slots.

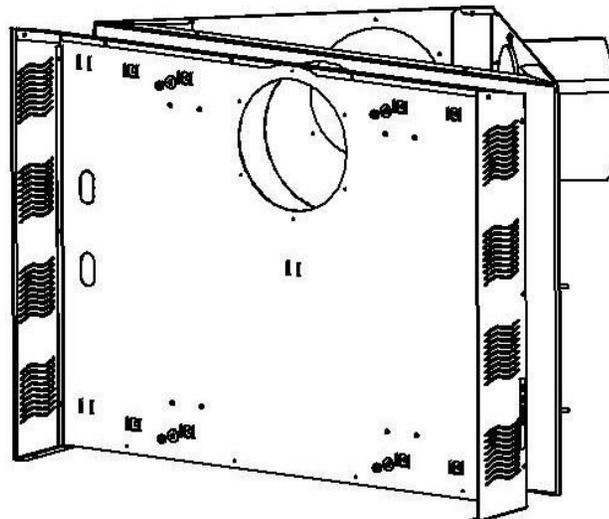


Fig. 5

**STEP 5:**

Attach the top, left and right decorative panels to the fireplace mounting plate. These items came with your fireplace unit. Then attach the mounting plate (with three outer panels attached) to the corner wall mount unit and fasten in place with 4 lock nuts and washers. See Fig. 5.

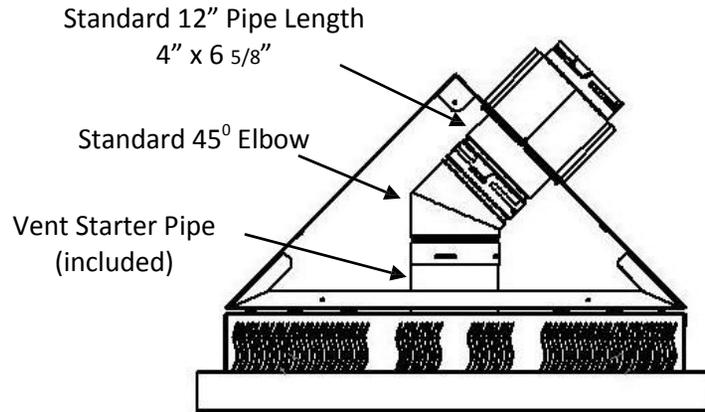


Fig.6

**STEP 6:**

Mount the unit on the wall mount and complete the installation as described in the installation instructions supplied with the fireplace. See Fig. 6 & 7.

Once the installation is complete, fit the top and bottom corner cover plates to the wall mounting unit using the screws provided. See Fig. 8.

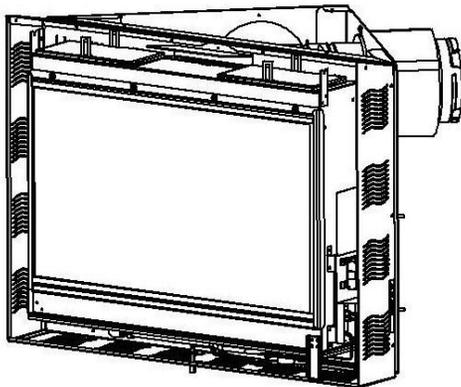


Fig.7

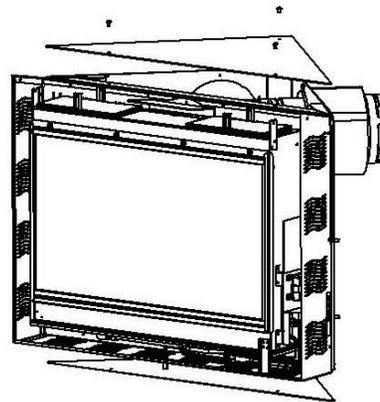


Fig.8