



Technical Data Sheet

DVI 44 (8860) High Altitude Conversion for NG

Kit 98-56605

Publish Date: June 13, 2011

KIT COMPONENTS:

7200-447 - #47 Front Burner Orifice
7200-439 - #39 Rear Burner Orifice
Instructions
Label

TOOLS REQUIRED:

½" (13mm) Socket or wrench

- 🔥 **CAUTION: TURN OFF THE GAS SUPPLY, DISCONNECT ANY ELECTRICAL SOURCE TO YOUR STOVE, AND REMOVE THE BATTERIES FROM THE RECEIVER BEFORE MAKING THIS CONVERSION.**
- 🔥 **IMPORTANT: This kit and these instructions apply to the DVI 44 (8860) model only. DO NOT attempt this conversion on any other model.**

- 🔥 **WARNING: THIS CONVERSION KIT MUST BE INSTALLED BY A QUALIFIED GAS SERVICE AGENCY IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS AND ALL APPLICABLE CODES AND REQUIREMENTS OF THE AUTHORITY HAVING JURISDICTION. IF THE INFORMATION IN THESE INSTRUCTIONS IS NOT FOLLOWED EXACTLY, A FIRE, EXPLOSION, OR PRODUCTION OF CARBON MONOXIDE MAY RESULT - CAUSING PROPERTY DAMAGE, PERSONAL INJURY, OR LOSS OF LIFE. THE QUALIFIED SERVICE AGENCY PERFORMING THIS WORK ASSUMES RESPONSIBILITY FOR THE PROPER CONVERSION OF THIS APPLIANCE WITH THIS KIT.**
- 🔥 **ATTENTION: CET ÉQUIPEMENT DE CONVERSION SERA INTALLÉ PAR UNE AGENCE QUALIFIÉE DE SERVICE CONFORMÉMENT AUX INSTRUCTIONS DU FABRICANT ET TOUTES EXIGENCES ET CODES APPLICABLES DE L'AUTORISÉS AVOIR LA JURIDICION. SI L'INFORMATION DANS CETTE INSTRUCTION N'EST PAS SUIVIE EXACTMENT, UN FEU, EXPLOSION OU PRODUCTION DE PROTOXYDE DE CARBONE PEUT RÉsulTER LE DOMMAGES CAUSER DE PROPRIÉTÉ, PERTE OU BLESSURE PERSONELLE DE VIE. L'AGENCE QUALIFIÉE DE SERVICE EST ESPONSABLE DE L'INSTALLATION PROPRE DE CET ÉQUIPEMENT. L'INSTALLATION N'EST PAS PROPRE ET COMPLÉTE JUSQU'À OPÉRATION DE L'APPAREIL CONVERTI EST CHÉQUE SUIVANT LES CRITÉRES ÉTABLIS DANS LES INSTRUCTIONS DE PROPRIÉTAIRE PROVISIONNÉES AVEC L'ÉQUIPEMENT.**

PROCEDURE:

1. Turn off the gas supply to the valve. Unplug the Fan Control Module from the 120 volt receptacle.
2. **Receiver Module Battery Removal:**
 - a. Move the Receiver's switch to the OFF position. Remove the cover plate screws and pry the entire plate with the switch off the receiver's battery compartment.
 - b. Remove the four batteries from the compartment
3. Remove the front façade. Remove the front glass assembly. To remove the glass assembly pull the spring mounted handles forward and up to free the glass frame. Carefully set everything aside. Remove the logs and set them aside. Carefully remove the ember burner. Refer to the owner's manual for additional instructions.
4. Lift the two air shutters out their cradles. Set them aside. Locate and remove the two original main burner orifices using a $\frac{1}{2}$ " (13mm) socket or wrench. Locate and install the #39 NG orifice in the rear location and the #47 NG orifice in the front location.
5. Place the two air shutter back in their original cradles. Be sure to carefully align the springs onto the slots on the air shutters. Loosen (but do not remove) the screw that locks the air shutters in place. Adjust the air shutters to a preliminary fully closed position (for NG) by sliding the air shutter levers all the way to the Left. Moving the levers to the right will open the air shutters. Moving them to left will close the air shutters. When the shutters are in the desired initial position tighten the locking nuts finger tight. See *Figure 1* below.

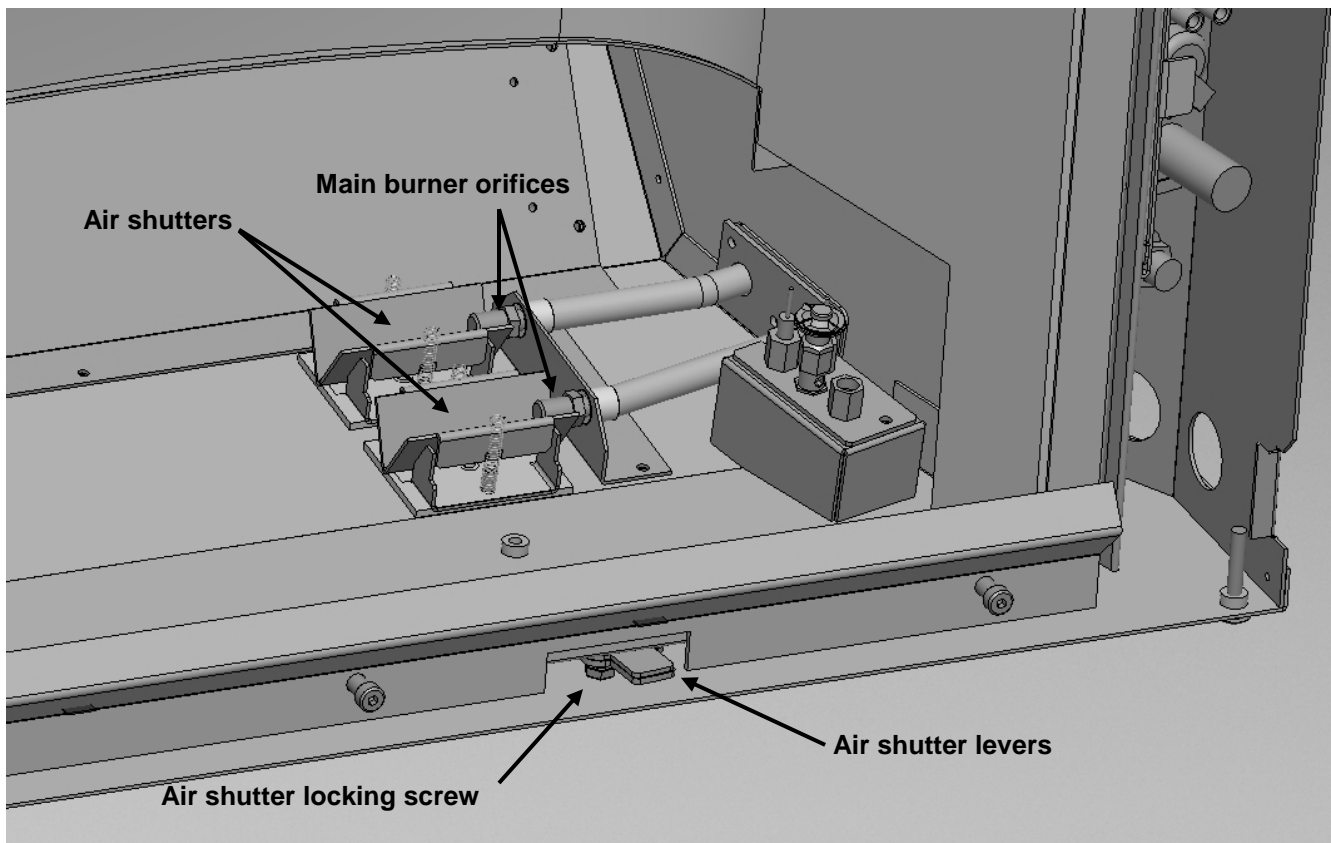


Figure 1

6. Reinstall the ember burner. Reinstall the logs according to the instructions in the owner's manual.

 **LEAK TEST ALL FITTINGS WITH A GAS SNIFFER BEFORE AND AFTER LIGHTING THE STOVE.**

7. Once the leak tests are complete record this change by filling out the high altitude conversion label and apply the label in a visible location near the gas valve.

8. Receiver Battery Installation

- a. Install four AA batteries. Ensure you orient the batteries correctly as indicated on the battery compartment cover.
- b. Ensure the switch is still in the OFF position, align the slider with switch stem and snap the cover plate back onto the battery compartment.
- c. Replace the cover plate screws.

9. Initializing the Remote Control

Note: Whenever you replace batteries, you must synchronize communication between the Receiver and the Remote Control transmitter.

- a. Place the slider switch in the REMOTE position.
- b. Insert the end of a paper clip into the hole marked PRG on the Receiver cover. The Receiver will beep three times to indicate it is ready to synchronize with the Remote Control.
- c. Push the Remote's ON button. The Receiver will beep four times to indicate the Remote's command is accepted and is set to the particular code of that Remote. The system is now initialized.

10. After the conversion is complete, and the logs are repositioned, seal the firebox and make final adjustments to the flame for each burner section. Replace the glass assembly and front façade.

- a. **Important: Burn the stove for at least 15 minutes before making any air shutter adjustments. Ensure that orange flames are not present, as this is a sign of incomplete combustion and will produce soot.**


The input rate of the heater is verified by checking the manifold pressure. If the manifold pressure is correct, then the input rate is correct. Test by connecting a manometer to the supply line and adjusting the incoming pressure if necessary to meet the required supply line pressure as listed in specifications.

| Specification | NG | LP |
|--|----------|-----------|
| INPUT RATING (Btu/hr) 0-610 m | 43,000 | 46,000 |
| MAXIMUM OUTPUT (Btu/hr) 0-610 m | 28,478 | 31,496 |
| MINIMUM INPUT (btu/hr) 0-610 m | 15,000 | 17,000 |
| ORIFICE SIZE (DMS) 0-610 m (f/r) | 46/38 | 55/53 |
| ORIFICE SIZE (DMS) 610-1370 m (f/r) | 47/39 | 56/54 |
| MANIFOLD PRESSURE - (in. W.c./kpa) | 3.5/0.87 | 10.0/2.48 |
| MANIFOLD PRESSURE - Low setting (in. W.c./kpa) | 1.6/.4 | 6.4/1.59 |
| INLET PRESSURE - MINIMUM (in.w.c./kpa) | 5.0/1.25 | 12.0/2.99 |
| INLET PRESSURE – MAXIMUM (in. w.c./kpa) | 7.0/1.74 | 13/3.22 |

Note: Refer to the owner's manual for the:

- a. Details on adjustment for the proper pilot and main burner flame appearance.
- b. Instructions for checking out the normal operating sequence of the ignition system.
- c. Location on the valve to check manifold pressure.

 **DO NOT REUSE THE PARTS THAT WERE REMOVED FROM THE STOVE!**

 **WARNING:** Failure to position the parts in accordance with these diagrams or failure to use only parts specifically approved with this appliance may result in property damage or personal injury.
AVERTISSEMENT. Risque de dommages ou de blessures si les pièces ne sont pas installées conformément à ces schémas et ou si des pièces autres que celles spécifiquement approuvées avec cet appareil sont utilisées.